

Ingresar la IP 192.168.2.1 en la barra de direcciones del Internet Explorer.

Ingresar PASSWORD: smcadmin.

SMC [®] Notworks
Login Screen
Password: LOGIN CANCEL
Please enter correct password for Administrator Access. Thank you.
We suggest that you use Internet Explorer 5.5 or above at a minimum of 1024x768 resolution. Copyright © 2006 SMC Networks, Inc. All rights reserved.

En la barra de la parte izquierda seleccionar el menú de SECURITY y posteriormente seleccionar el submenú de WIRELESS.

SMC [®]	SECUR
Setup Wizard	Security
Home Network	occarty
Settings	Device provides a stateful inspection firewall which is designed to protect against Denial of Service attacks when
Security	activated. Its purpose is to allow a private local area network (LAN) to be securely connected to the Internet.
Firewall	
Wireless	
Advanced Settings	



SMCWBR14G2

Donde dice ENABLE OR DISABLE MODULE FUNCTION seleccionar la opción de ENABLE y en el recuadro inferior teclear SAVE SETTINGS para que los cambios se guarden.

SMC®	SECURITY
Setup Wizard Home Network Settings Security Firewal Wireless D Wireless Encryption D Access Control D WEP D WPA/WPA2 D 802.1X Advanced Settings	Wireless Settings The wireless router can be quickly configured for roaming clients by setting the service set identifier Wireless Network Name(SSID) and channel number. It also supports data encryption and client filtering. Enable or disable Wireless module function : ③Enable ①Disable SAVE SETTINGS

CONFIGURAR PASSWORD

- En la barra de la parte izquierda seleccionar del submenú de WIRELESS la opción de WEP.
- En la opción de WEB MODE habilitar la configuración de 64 BIT.
- Habilitar la opción de PASSPHRASE y en el recuadro posterior ingresar la contraseña deseada de 10 dígitos numéricos.
- Dar clic en SAVE SETTING para que se guarden los cambios.

Networks		an a			
Setup Wizard 🏠	WEP				
Home Network Settings	WEP is the basic mecha	anism to transmit you	ur data sec	urely over the wire	less network. Matching
Security	be setup on your wirele	ss router and wirele	ss client de	vices to use WEP.	
Firewall Wireless		WEP Mode	⊙64-bit	0 128-bit	
Wireless Encryption		Key Entry Method	• Hex	OASCII	
Access Control		Key Provisioning	⊙ Static	ODynamic	
P WPA/WPA2		Static WEP Key Se	etting		
¥ 602.1X		10/26 hex digits fo	r 64-WEP/1	28-WEP	
Advanced Settings		Default Key ID	1 🛩		
		Passphrase	33108	62246	(1~32 characters)
		Key 1			
		Key 2			
		Key 3	*******		8
			1		



SMCWBR14G2

FILTRADO POR MAC

- En la barra de la parte izquierda seleccionar del submenú de WIRELESS la opción de ACCESS CONTROL.
- En la opción de ENABLE MAC FILTERING habilitar la configuración de ENABLE.
- En la opción de ACCES RULE FOR REGISTERED MAC ADDRESS habilitar la configuración de ALLOW.
- Ingresar las MAC'S de los equipos deseados.
- Dar clic en SAVE SETTING para que se guarden los cambios.

Setup Wizard	^	Access	Control			
Home Network Settings		For a more secure Wireless network you can specify that only				
Security		certain W MAC addr	certain Wireless PCs can connect to the Wireless Router. Up to 32 MAC addresses can be added to the MAC Filtering Table. When			
 Firewall Wireless 		enabled, a Rule.	all registered MAC addresses are controlled by the Access			
Wireless Encryption		• Ena	ble MAC Filtering: O Enable O Disable SAVE St	ETTINGS		
Access Control				CANCEL		
▶ WEP		• Acc	cess Rule for registered MAC address: (*) Allow			
WPA/WPA2	-		Seriy (
▶ 802.1X		 MAG 	C Filtering Table (up to 32 stations):			
Advanced Settings		ID	MAC Address			
		10				
		1				
		2	00 : 00 : 00 : 00 : 00 : 00			
		З	00 : 00 : 00 : 00 : 00 : 00			
		4	00 : 00 : 00 : 00 : 00 : 00			
		5	00 : 00 : 00 : 00 : 00 : 00			
	¥	6	00 : 00 : 00 : 00 : 00 : 00			
<						

CAMBIO DE CANAL

- En la barra de la parte izquierda seleccionar el menú de HOME NETWORK SETTINGS y posteriormente seleccionar el submenú de CHANEL AND SSID.
- En la opción de WI-FI CHANNEL NUMBER seleccionar el canal.
- Dar clic en SAVE SETTING para que se guarden los cambios.

Setup Wizard Channel and Wireless Network Name(SSID) Home Network This page allows you to enter the Wireless Network Name(SSID) and the Channel number. These parameters for a wireless computer to connect to this wireless router. Status LAN Settings WAN Settings Wireless Network Name (SSID) Wireless Broadcast Wireless Network Name P Channel and SSID Wireless Network Name P WDS Wireless Network Name Security Wireless Control of Channel number Extend Range Extend Range	SMC [®]	
Home Network Settings This page allows you to enter the Wireless Network Name(SSID) and the Channel number. These parameters for a wireless computer to connect to this wireless router. Status LAN Settings WAN Settings Wireless Network Name (SSID) smith Broadcast Wireless Network Name © ENABLE DISABLE D Channel and SSID Wireless Network Name P WDS Wireless Mode Security Extend Range Extend Range ENABLE	Setup Wizard	Channel and Wireless Network Name(SSID)
Status for a wireless computer to connect to this wireless router. LAN Settings Wireless Network Name (SSID) smith Wan Settings Broadcast Wireless Network Name © ENABLE © DISABLE D Channel and SSID Wireless Network Name @ ENABLE © DISABLE WDS Wireless Mode 11 b/g Mixed mode ♥ Security Extend Range © ENABLE © DISABLE	Home Network Settings	This page allows you to enter the Wireless Network Name(SSID) and the Channel number. These parameters
LAN Settings Wireless Network Name (SSID) smith Wan Settings Broadcast Wireless Network Name © ENABLE DISABLE P Channel and SSID Wireless Network Name © ENABLE DISABLE P WDS Wireless Mode 11 b/g Mixed mode 3 Security Extend Range © ENABLE DISABLE	Status	for a wireless computer to connect to this wireless router.
Wireless Broadcast Wireless Network Name ENABLE DISABLE Wireless Mode Wireless	LAN Settings WAN Settings	Wireless Network Name (SSID) smith
P Channel and SSID Wireless Mode 11 b/g Mixed mode P WDS Wi-Fi Channel number 3 Security Extend Range ENABLE	Wireless	Broadcast Wireless Network Name O ENABLE O DISABLE
Wi-Fi Channel number 3 Security Extend Range © ENABLE O DISABLE	Channel and SSID	Wireless Mode 11 b/g Mixed mode 💌
Extend Range Extend Range Extend Range	P WDS	Wi-Fi Channel number 3
	Security	
Advanced Settings	Advanced Settings	